

HR269110 | LED Lamp, 4500 Lumens

Instruction Guide

This lamp is designed to accommodate left or right side applications.

1. Remove the original lamp from machine and disconnect the electrical plug.
2. Attach new electrical connector and install new lamp.
3. Adjust beam to desired direction and secure hardware.

