



CAT1246832 [Bridgelux LED Flood Beam Outer or Center Grille Lamp, 3500 Lumens]

Instruction Guide

1. Remove grille from machine
2. Remove OE lamps and disconnect wiring connections
3. Install new electrical disconnects to machine and lamp
4. Place screws (provided) through holes, place lamps into position and secure lamp to machine
5. Replace grille

