



HF86038019 [LED Flood Beam 1680 Lumens]

Instruction Guide

1. Disconnect electrical connection and remove bolt that holds light to bracket
OE bracket should remain on the machine
2. Remove light from bracket and replace with new Hy-Cap light. Insert bolt, washer & nut
to hold light in place
3. Attach electrical connector
4. Adjust beam to desired direction and secure all hardware

