




R27706 NEW [11" Dual Stage Pressure Plate - New]

Instruction Guide

Inspect unit and realign if necessary. During shipment it is possible for the cast plate drive lugs to become misaligned. If problems have occurred remove lever nuts (A), reassemble in flywheel, and then adjust as explained below

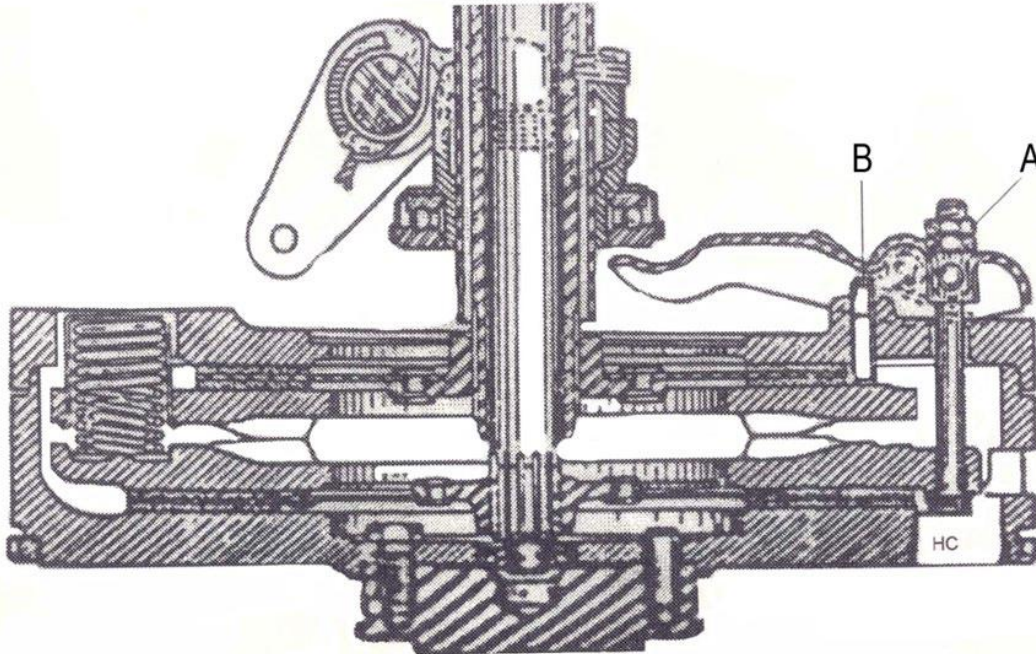

After clutch assembly have been bolted to flywheel a release lever adjustment must be done. Loosen adjusting nuts (A) evenly until release levers contact PTO clutch push pins (B). Tighten adjusting nuts 2-1/2 turns and then secure by tightening jam nuts

NOTE: Minor adjustments may be required to equalize lever heights

Flywheel Step is: 2.205