



R830697 [Release Bearing Carrier Assembly]

Instruction Guide

To ensure proper disengagement of the R830697 release carrier, we have stamped (UP) on the release bearing carrier. The grease hole is also an identification point located on the same side as the stamped (UP). Please identify these points on the carrier before installing to ensure the life of the carrier

