




W870880N [11" Single Stage Pressure Plate - New]

Instruction Guide

Borg Beck Clutch Installation


The primary cause of lever strut displacement has been identified as the release lever or release lever plates being pulled away from the flywheel, putting excess pressure on the anti-rattle spring. This results in the strut being left in a "free" position and will cause it to fall out of the correct pivot position. One or more release levers positioned higher than the other would indicate a strut being out of position. If this problem is not corrected, the clutch will not function properly. Please call our Service Department if you identify this issue

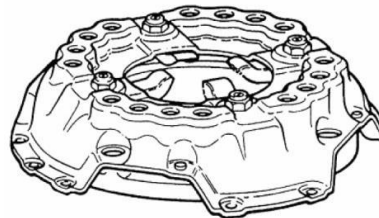


Important Installation Notice

1. Check adjustment as outlined below
2. **Stake adjustment nuts on each side of eye bolt**

Points of Adjustments

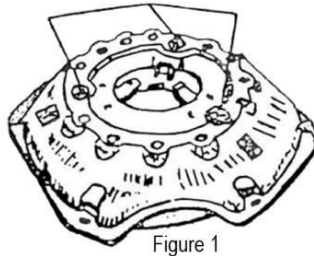

Clockwise adjustment closes the distance.
Counterclockwise adjustment increases gap distance (applies also to four finger clutches).

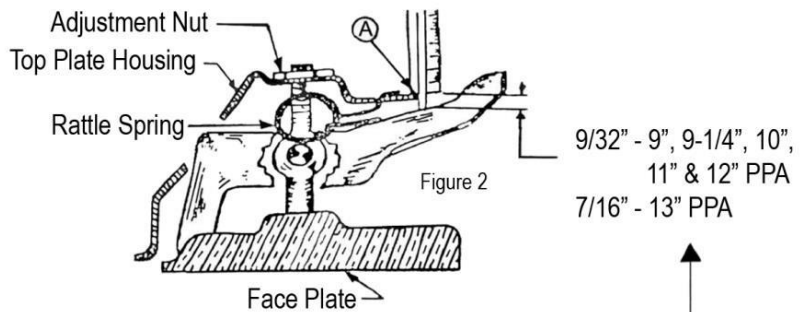

9/32" - 9", 9-1/4", 10",
11" & 12" PPA
7/16" - 13" PPA

Distance from top of housing (top plate) to top of finger should measure _____
See figure 2 (A).