


S399211AB [Mid Back Seat, Black & White Vinyl]

Instruction Guide

1. Bolt the left boomerang to the seat back placing a 1/2" washer and two 3/8" lock washers between the boomerang and the seat back. Fasten it using two 5/16" x 1" bolts
2. Repeat step 1 for the right boomerang
3. Insert the 3/4" bushing into the hole on the armrest
4. Place a 1/2" washer on the 1/2" x 2 1/4" bolt. Place the bolt through the left armrest
5. Place the 3/4" machine washer on the outside of the armrest onto the 3/4" bushing
6. Place the two 3/4" spring washers on the 3/4" bushing
7. Fasten the armrest to the side of the seat back
8. Repeat steps 3 through 7 for the right side of the seat

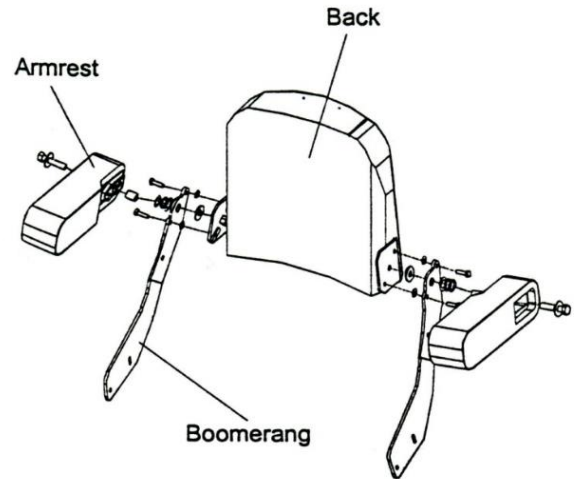

Description	Quantity
5/16" x 1" Bolt	4
1/2" x 2 1/4" Bolt	2
3/8" Lock Washer	4
1/2" Washer	4
3/4" Bushing	2
3/4" Spring Washer	4
3/4" Machine Washer	2