




S830872 [Compact Mechanical Suspension Assembly]

Instruction Guide

Instruction Guide S830872

S830872
Includes parts
1, 2, 3, S830952 (#4) and 5.
Seat assembly must be
ordered separately.

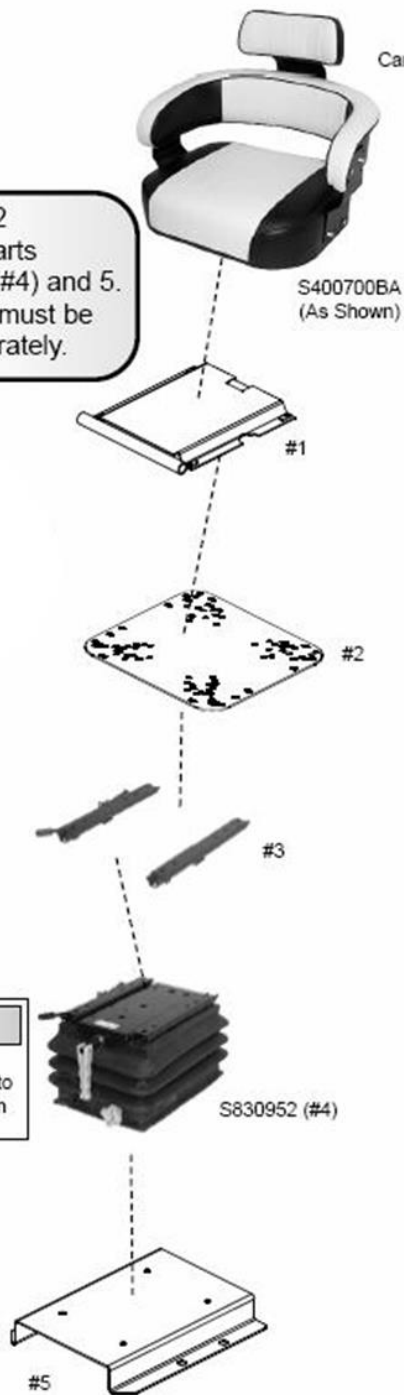

Can also be used with:
S400699
S400700
S400720
S400700BU

Installation Instructions to Place a Compact Mechanical Suspension in IH 06, 26, 56 and 66 Series Tractors

1. Remove the original seat and suspension mechanisms.
2. Bolt #2 to #3 with four 5/16" x 3/4" flat head socket cap screws and 5/16" jam nuts. (Four 3/8" nuts are used as spacers between #2 and #3.)
3. Tighten the bolts, then pull the slide rail lever and slide the rails and #2 off the suspension.
4. Bolt the suspension to #5 with four 5/16" x 3/4" bolts, lock washers and nuts.
5. Bolt the suspension and pedestal assembly to the tractor casting with the original bolts.
6. Bolt #1 to the seat with the original half clamps. Bolt #1 to #2 with four 5/16" x 3/4" bolts, lock washers and nuts.
7. Slide #2, #3 and the seat assembly on to the suspension.

Note!

Weight needs to be applied to suspension to activate pump and turn mechanical knobs.