



SA8301398 [Side Kick Seat, Gray Fabric]


Instruction Guide

Tools Needed:

1/2" Wrench
(2) 9/16" Wrenches
7/32" Allen Wrench
Utility Knife

Parts Included:

A. Floor Bracket
B. Magnum Buddy Seat
C. Support Bracket
D. Instruction Guide
E. Washers & Nuts

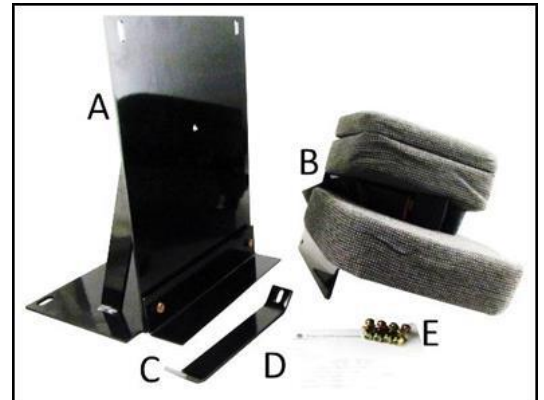

1. Remove OE armrest from bracket (make sure to leave seat belt)
2. Remove nuts and washers from factory seat bolts at floor



3. Install (A) Magnum Buddy Seat floor bracket on 2 factory seat bolts. Secure with (E) flat washer and locking nuts



SA8301398 [Side Kick Seat, Gray Fabric]

Instruction Guide

4. Install (B) seat and (C) support bracket with (E) bolts provided



5. Adjust floor support and seat to customer satisfaction
6. Tighten all bolts

