




## S8301990 [Sears Mid Back Seat, Gray Fabric w/Air Suspension]

Instruction Guide



Α

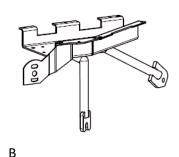


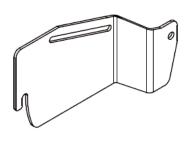

C




- 1. Verify which Control arm mount is on the existing seat. See the pictures to the left. <u>NOTE: The plastic housing, buttons, and switches</u> are not shown
- 2. If you have the A or B mount, you will use the Front Mount AB. If you have mount C you will used the Front Mount C
- 3. Remove the right arm rest and seat cushion from the new seat. To remove the seat cushion, pull up on the front of the seat. Remove the seat belt from bolt sides. Reinstall the seat belt so the latch is on the right and the retractable belt is on the left
- 4. If you have the A or B control arm mounts, install the Front Mount AB to the front right side of the seat pan using two  $5/16'' \times 5/8''$  bolts and flange nuts on the side and a  $5/16'' \times 5/8''$  bolt running from the bottom up with a flange nut. If you have the C Control Arm Mount, mount the Front Mount C to the right side of the seat pan using two  $5/16'' \times 5/8''$  bolts and flange nuts
- 5. Mount the rear of the control arm to the seat. Use the hole to the lower right of the square hole (see picture). Use the 3/8" x 2 ½" bolt, 1" spacer, 3/8" washer and lock nut. The bolt should go in the hole on the seat and run outward. The spacer goes in between the seat and the control arm mount. The washer goes on the outside of the control arm along with the lock nut
- 6. Fasten the front of the control console to either the Front Mount AB or Front Mount C bracket depending on which control mount you have. Use a 5/16" x 5/8" bolt and flange nut for the Front Mount AB. Use a 3/8" x 3/4" bolt and flange nut for the Front Mount C



Front Mount AB

Mounting Detail – Parts of seat not shown for clarity. View from rear right of seat. Detail of option C



Front Mount C

