




# S8302214

## Installation Guide

1. Before starting with installation, if you wish to remove the plastic from bottom seat cushion, do so now.
2. Remove board from the top of the suspension, you will not need to save these bolts and washes.
3. Remove slide rails from the seat frame. Keep the bolts to attach the swivel to the seat later in step 5.



4. Open the hardware bundle attached to the swivel handle; install the side rails using the longer bolts from bundle (8mm). Use (4) black spacers between suspension and rails. Install with notches towards the front of the suspension and the handle on rails as pictured to tighten bolts you will need to move seat forward & backwards on the rails. And turn the swivel to line up the holes.
5. Using four short allen bolts (8mm) and four nuts, install the bottom of the swivel to the top of the rails. The top of the swivel will have the Grammer label. Knockouts will need to be removed to insert the bolts.

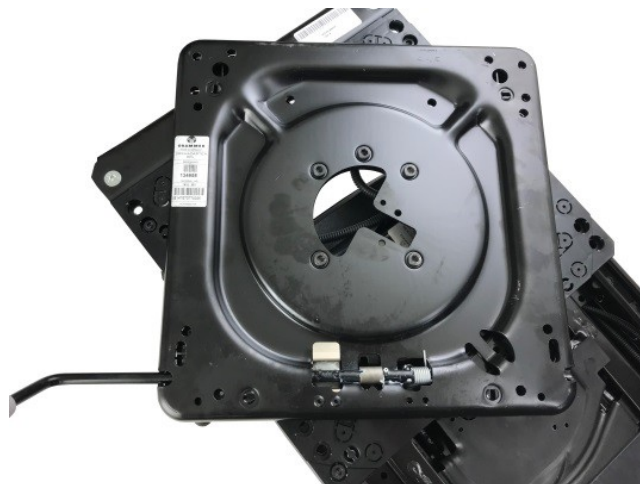



## S8302214

Installation Guide

6. Attach the top of the swivel to the bottom of the seat frame using the four allen bolts (from step 2). Knockouts will need to be removed to insert the bolts. Between the swivel and the seat bottoms you will need to install the taller, silver spacers provided. To make it easier you may want to slide the swivel off the suspension.

